


## PRE-2-M Post Top Installation Instruction


All installation work must be performed by a qualified, certified electrician.

**Caution!** Disconnect all power before installation.


1. Remove (x6) set screws from Post Top provision.

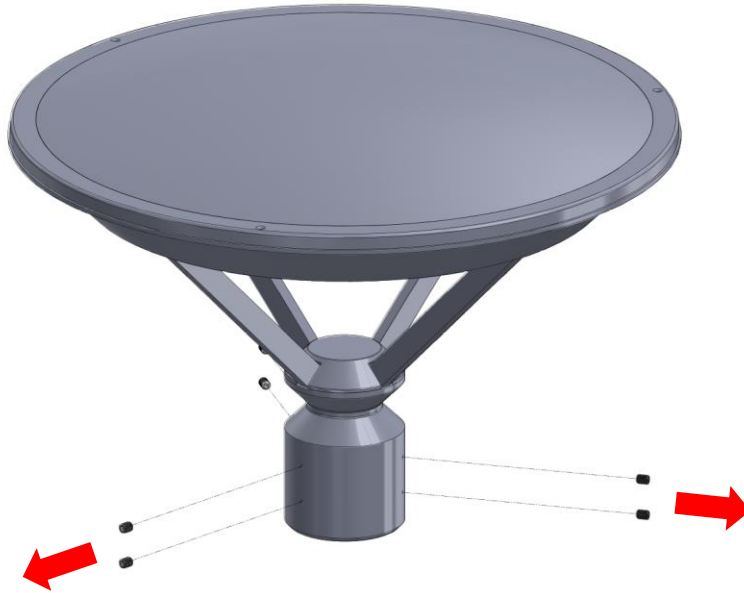

2. Slip Post Top Fitter provision in pole.

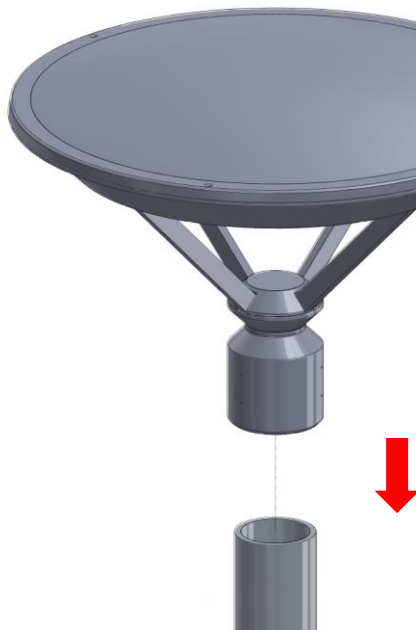

3. Fasten (x6) set screws to secure in place.

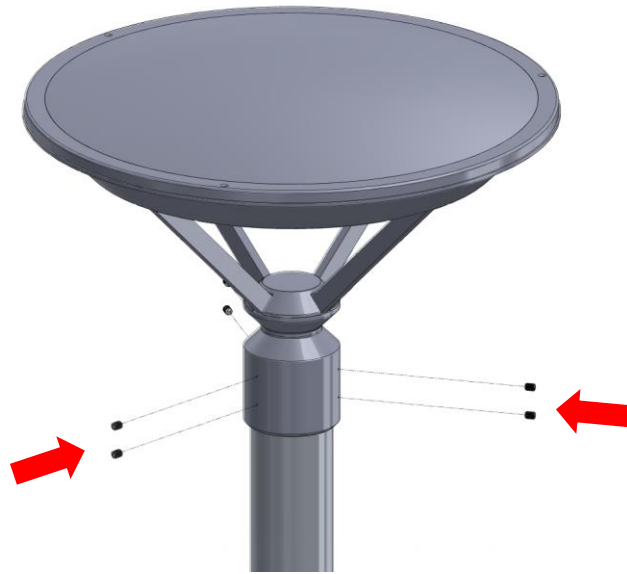

4. Final assembly.

